USER'S MANUAL

www.pyleaudio.com

PYLE®
SPORTS

PSWP4BK
PSWP4WT
PSWP4BL

Waterproof Neckband MP3 Player And Headphones For Swimming, Water Sports

User's Manual

⚠ Warning

- Please use the three steps earbuds when swimming to prevent water from leaking in and damaging the player. Please choose among different size of earbuds according to your comfort level.
- For your safety, please don't use the player when driving, riding a bike, or jogging on the road. When the volume is high, be careful crossing the street.
- Listening to music at high levels for extended periods of time will cause hearing damage.

■ Press and hold the Power Button for 5 seconds to power ON/OFF.

■ When diving or swimming forward very fast, player may be pulled down due to water resistance, this problem can be solved if you put your swimming goggles against the connecing rod at the point near ear(see right picture).

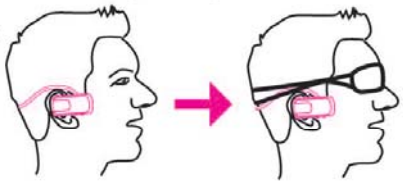

■ Function Keys

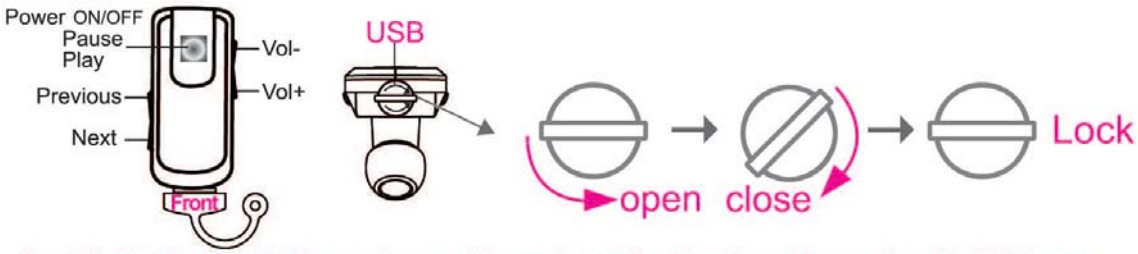

Special attention: The USB cover has positive and negative directions. Please close the USB cover according to the instructions in the manual or the USB cover may be damaged allowing water to seep into the player, further damaging it.

■ The volume may go down when swimming. This is due to a thin film of water that forms on the waterproof net or speaker. If this occurs, gently blow on the earbuds and squeeze them to release the water. You may also let the earbuds sit in a dry place for 10 hours ensure proper playback.

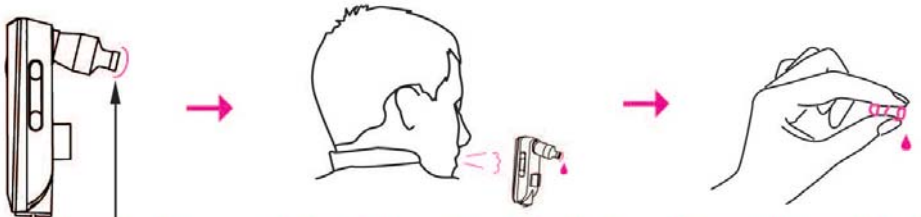

It forms a thin water film on the waterproof net.

Take off the waterproof earbuds, blow off the water film.

Squeeze the earbuds to let the water come out.

■ Basic Functions

- Waterproof sport Mp3, IP rating: IPX8.
- Support MP3 and WMA formats.
- USB 2.0 high-speed.
- Built-in rechargeable lithium battery 190mAh, operating time 10hours.

■ Precautions

- Do not use the player in extreme temperatures or extremely dry environments. The player may not work in temperatures above 40° C (104° F) or below -5° C (23° F).
- If the player is handled roughly, surface may be scratched, battery may fail, and firmware may be damaged.
- Do not disconnect the player when it is formatting, downloading, or uploading. Otherwise, it will cause a "program error" or " Computer unrecognized" message.
- Do not repair, dismantle or rebuild the player without permission from the manufacturer.
- Keep volume low to avoid hearing damage.
- We are not responsible for any personal data losses or other indirect losses caused by improper operation, software, hardware, product maintenance or other accidents.
- User's manual is subject to change without prior notice.

Troubleshooting

If problem persists after going through the troubleshooting guide, please contact technical support.

Problems	Solutions
• No response after pressing Power ON/OFF • Stops automatically • System powers off automatically when unplugged	• Please charge.
No sound from earbuds	• Make sure the volume is set above "0". • Damaged Mp3 files may result in hearing noise or failure to play music. Make sure the files are uncorrupted.
Unable to download music	• Check if the USB line is broken or not connected well. • Check if the driver is installed appropriately. • Check that storage memory is not blank.
Can not be read by computer	• Check if the USB wire is broken or not connected well. • Check if the operation is incorrect. • Check if the driver software is installed.
Failure to play the compressed MP3	• Damaged Mp3 files may result in hearing noise or failure to play music. Make sure the files were uploaded completely.

Description of Function Keys

Key		Press	Playback Mode	Pause Mode
Power ON/OFF Pause Play	▶II	Press and hold for 5 seconds	Power ON/OFF	
		Press	Pause	Resume playback
Select F.FWD F.REV	▶▶I	Press	Next and playing	Next
		Press and hold	Rewind	Next
	I◀◀	Press	Previous and playing	Previous
		Press and hold	Rewind	Previous
Volume+	VOL+	Press	Volume increase	Volume increase
		Press and hold	Fast Volume increase	Rewind
Volume-	VOL−	Press	Volume decrease	Volume decrease
		Press and hold	Fast Volume decrease	Fast Volume decrease

Shuffle play mode: *All 2013 models now come with the Shuffle function

When the player is on, press pause(Power ON/OFF) button, then press NEXT button, the player will be in random play mode.

When in random play mode, press pause(Power ON/OFF) button, then press PREVIOUS button, the player will be in normal play mode.

Attention: MP3 player keys are multi-functional. The pressing modes contain Press & Hold and Press. Different operating modes stand for different function.

Accessories

MP3 player comes with the following

1. MP3 player
2. USB cable
3. Manual

4. Two series of earbuds



Swimming use waterproof earbuds

Land use earbuds

Specifications

IP Rating	IPX8
Dimensions	124mm x 33mm x 150mm
Weight	22g
USB Interface	USB 2.0 (High speed)
Battery	Lithium battery 190 mAh
Memory	4GB
Music format	MP3 , WMA
File Format	FAT16, FAT32
MP3 bite rate	8Kbps~320Kbps
WMA bite rate	32kbps~192kbps
Earphone output power	5mW+5mW
Frequency response	20Hz-20KHz
S/N	>70dB
Distortion	<0.1%
Operating environment	-5°C~40°C(23°F~104°F)